 
 


Reader™ Quick Start Guide

How to register Reader Library software to your computer and authorize your new device¹

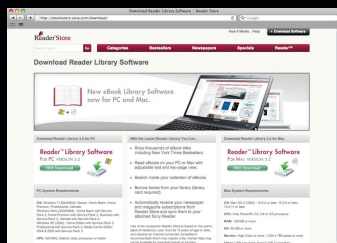


- 1 Go to readersstore.sony.com and click on "Download Software" button in top right corner.
- 2 Select to download Reader Library software to your PC or Mac and click "FREE download." Click "Run" to begin download.
- 3 Choose setup language, click "OK" and complete "Install Wizard."
- 4 Once you've installed Reader Library Software, you will need to set up an account.

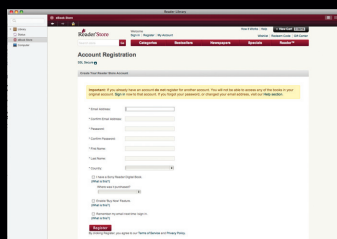

- 5 Connect your Reader via provided USB to authorize it for use with the Reader Library. Go to "Manage Devices" to add your Reader.
- 6 Reader will be located at the bottom under "We have detected the following attached devices." Click "Authorize this device" to register your Reader.

How to browse Reader Store and purchase content

Open your Reader Library software to access over 1,000,000 eBooks!¹

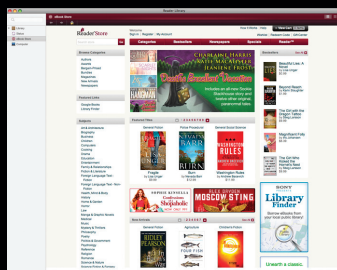


- 1 Search or browse through categories and subjects to find eBooks, newspapers or magazines of your choice.
- 2 Click on "Add to Cart" or simply click on "Buy Now" for even quicker checkout.
- 3 Click on "View Cart" when you finished shopping.
- 4 Click on "Checkout" to review your purchase.
- 5 Click on "Complete Purchase" to purchase and download titles.

Checking books out from your local public library²



- 1 Visit readerstore.sony.com
- 2 Click on "Library Finder" in the "Featured Links" Category on the left side of the page.
- 3 Your internet browser will redirect you to sonysearch.overdrive.com/
- 4 Search for a public library by State or Zip Code.
- 5 Click on your choice of public library from search results.
- 6 To borrow an eBook, follow the instructions from your public library's website.

How to use advanced features

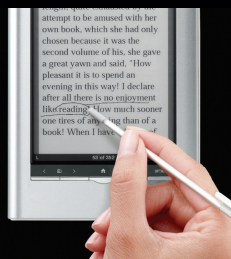

1 Highlighting

- On desired page, tap twice at the start of the text using the stylus and drag.
- Text will be highlighted black.
- Tap once to cancel highlight.

2 Dictionary

- On desired page, highlight a word by tapping twice and dragging to the end.
- Dictionary will pop up at the bottom of the screen with suggestions for highlighted word (if any).



3 Taking Notes

- On desired page, select "Options."
- Select "Notes" from the menu.
- Select "Create/Edit."
- On the pop-up menu at the top, select the "Notes" icon.
- Drag across desired text which will then be highlighted grey indicating a note has been made.

Screen images simulated.

1. Requires Internet connection (broadband recommended) and compatible PC or Mac. Must be US or Canadian resident, age 13 years and older. Account registration required. Content availability may vary based on location. 2. Requires valid library card. Content availability may vary.

©2010 Sony Electronics Inc. All rights reserved. Reproduction in whole or in part without written permission is prohibited. Sony, Reader and the Reader and Sony make.believe logos are trademarks of Sony. All other trademarks are trademarks of their respective owners. Specifications, availability, prices and terms of offers are subject to change without notice. Sony is not responsible for photographic or typographic errors. Other terms and conditions may apply. Printed in USA.

SR-1030